



### Removal

---

- 1 Press liner for filler neck cap out of holder.

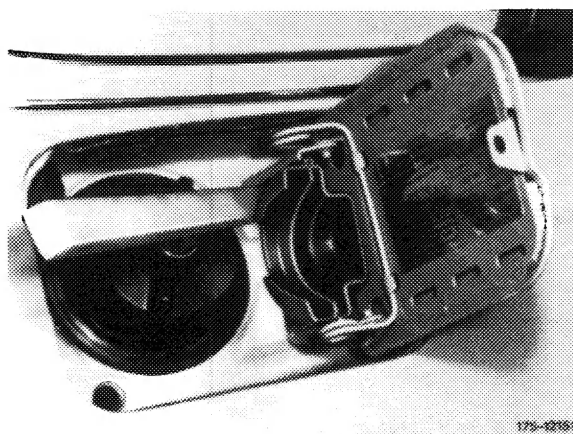

- 2 Unscrew both screws and remove tank flap.

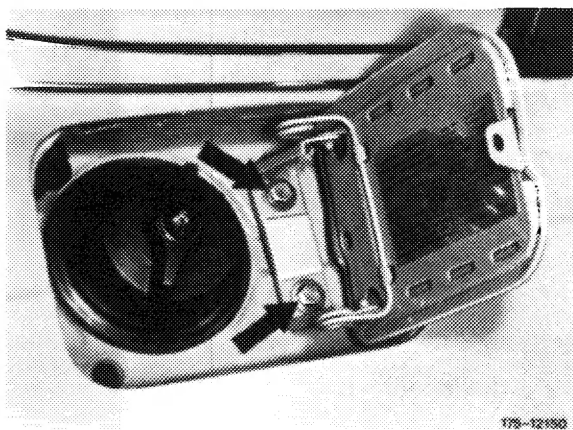

### Installation

---

- 3 Install in reverse sequence, making sure that both rubber seals fit properly.

